




nachfolger GmbH
Boecklinstrasse 59 / 2
1020 Vienna
Austria, EU

www.nachfolger.com
info@nachfolger.com

C101_802_C

nachfolger[®] **pump**

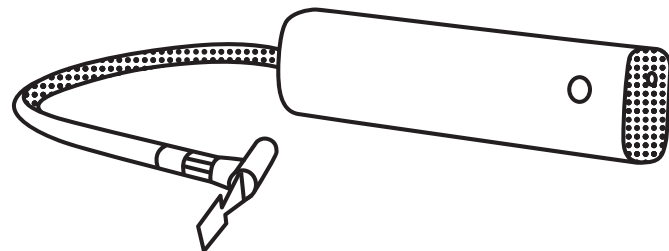


compatible with
nachfolger HY5 series

OPERATION OF THE PUMP

The mobile pump allows maximum flexibility, as well as mobility and further intensified the simplicity of the nachfolger HY5 series.

FUNCTION OF THE PUMP

- Briefly press the button (A) 3 times to activate it.
- The button flashes blue, when the activation of the pump was successful.
- Afterwards the pump function can be switched on and off by pressing the same button (A).
- When the correct pressure is reached, the pump switches off automatically.
- If the pump is not used for 30 seconds, it must be activated again.

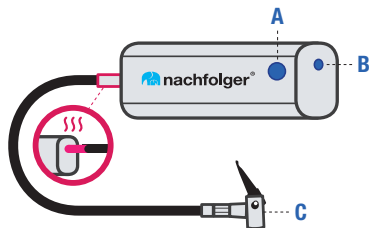

NOTE! After filling the seat, the hose connector (C) of the pump must be removed from the valve, otherwise the valve remains slightly open.

Charging the pump:

The pump can or should be easily recharged (B) with the charger while driving on the 12V socket in the car, so it is always ready when you need it while traveling.

NOTE! Especially when traveling by airplane, ensure that the pump will not be activated accidentally by other objects.


WARNING! Please note, that the tube will get hot after the inflator has worked for a long time.

TECHNICAL DATA

- Input voltage: 15V DC, cigarette lighter 12V DC
- Battery type: LiFe (Lithium Iron Phosphat)
- Energy content: 6,6 Wh
- Battery current: 500 mAh
- Max. current: 5 A
- Inflator efficiency: Fill up nachfolger HY5 series in 3 minutes
- Max. pressure: 0,9 bar
- Operation temperature: -20°C – +60°C
- Size: 55 mm x 45 mm x 200 mm

PACKAGE

- 1x Inflator (D)
- 1x Tube with Air Hose (E)
- 1x USB Charger (F)
- 3x Sealing Ring (G)
- 1x Hand Bag (H)
- 1x User Manual

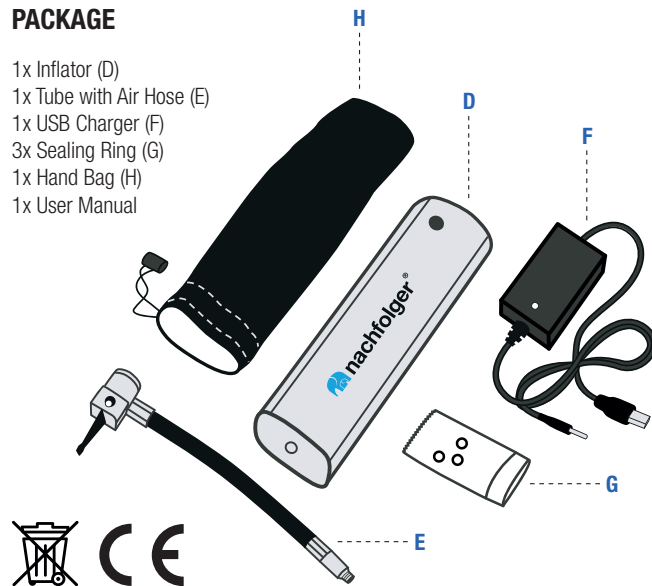

Made in China